

INDEX

A

Accessories	15-1
Air Conditioning	
Automatic Temperature Control . . .(Section 1C)	
Air Flow	1C-3
Bi-Level Boost	1C-16
Control Panel	1C-2
Electrical System	1C-7
General Description	1C-1
Programmer	1C-1
Sensors	1C-1
Service	1C-16
Temperature Door	1C-18
Testers	1C-20
Vacuum System	1C-3
Basic Air Conditioning Information (Section 1A)	
Gauge Set	1A-5
Leak Detectors	1A-5
Operation of Systems	1A-1
Precautions	1A-3
Principles of Refrigeration	1A-1
Refrigerant Leaks	1A-7
Service Station	1A-7
Stability - Chemical	1A-4
Vacuum Pump	1A-7
Custom Air Conditioner(Section 1B)	
Adjustments	
Pontiac	1B-31
Tempest	1B-32
Air Flow	
Pontiac	1B-21
Tempest	1B-24
Air Inlet Assembly - Pontiac	1B-35
Blower Control	
Pontiac	1B-23
Tempest	1B-25
Blower Motor Assembly	1B-34
Clutch	1B-17
Clutch Control Switch	1B-41
Coil - Clutch	1B-17
Compressor Assembly	1B-13
Condenser	1B-19
Control Panel	
Pontiac	1B-2
Tempest	1B-3
Cylinder Block	1B-15
Cylinder Head	1B-13
Duct Assembly	1B-35
Electrical System	
Pontiac	1B-22
Tempest	1B-24
Evaporator	1B-9
Expansion Valve	1B-7
General Description	1B-1
Heater Core and Case Assembly . 1B-6, 1B-37	
Leaks	1B-72
Nozzle Assembly - Bezel and	1B-42
Oil Flow	1B-15
Oil Level	1B-53
Oil Pump	1B-15

Accessories

Air Conditioning

Custom Air Conditioner (Continued)

Operational Test Chart	1B-93
Periodic Service	1B-31
P.O.A. Valve	1B-12
Pistons - Compressor	1B-15
Pulley - Compressor	1B-57
Receiver-Dehydrator Assembly	1B-19
Services and Repairs 1B-45	
Charging the System	1B-48
Compressor	1B-53
Condenser	1B-72
Evacuating the System	1B-46
Evaporator	1B-74
Expansion Valve	1B-73
P.O.A. Valve	1B-74
Receiver-Dehydrator Assembly	1B-73
Shaft Seal - Compressor	1B-17
Specifications	1B-98
Suction Cross-Over	1B-16
Swash Plate	1B-16
Temperature Control	
Pontiac	1B-3
Tempest	1B-6
Testing and Diagnosis	1B-91
Thrust Bearings	1B-15
Vacuum System	
Pontiac	1B-21
Tempest	1B-24
Antenna - Electric	1B-21
Antenna - Manual	15-20
Automatic Level Control	4-9
Clocks	15-1
Defogger - Rear Window	15-23
Radios	15-3
Speaker - Rear Seat	15-8
Speaker - Verbra-Phonic	15-20
Stereo-Tape	15-8
Tachometer	15-24
Air Cleaner and Silencer	6B-1
Air Conditioning(See Accessories)	
Air Injection Pump	6D-4
Air Injector Reactor System	6D-3
Alignment - Front Suspension	3-8
Anti-Freeze	6A-8
Assembly Plant Codes	0-1
Axle - Rear(See Differential)	

B

Back-Up Lamps	12-23
Ball Joints(Section 3)	
Check	3-7
Remove and Replace Upper	3-18
Remove and Replace Lower	
Pontiac	3-18
Tempest	3-19
Battery	6C-3, 6E-1, 12-1
Bearings(See Unit Concerned)	
Belt Tension Chart	6A-15

Body Mountings	2-2
Block Assembly	
Pontiac	6-43, 6-82
Tempest	6-7, 6-38
Brakes	
Disc (Section 5D)	
Bleeding Disc Brakes	5D-8
Brake Disc	5D-4
Disc Brake Caliper	5D-4
General Description	5D-1
Metering Valve	5D-7
Service Procedures	5D-2
Specifications	5D-11
Trouble Diagnosis	5D-8
Power - Bendix (Section 5B)	
Adjustments	5B-5
Air Filter	5B-9
Assemble	5B-9
Bleeding Brakes	5B-5
Disassemble	5B-6
General Description	5B-1
Master Cylinder	5B-5
Minor Repairs	5B-5
Overhaul	5B-5
Power Piston	5B-7, 5B-9
Push Rod Adjustment	5B-10
System Tests	5B-11
Trouble Diagnosis	5B-11
Power - Bendix Heavy Duty (Section 5C)	
Adjustments	5C-6
Bleeding Brakes	5C-7
Diaphragms	5C-8, 5C-11
General Description	5C-1
Major Repairs	5C-7
Master Cylinder	5C-7, 5C-9, 5C-10
Minor Repairs	5C-7
Push Rod Adjustment	5C-12
System Tests	5C-12
Trouble Diagnosis	5C-13
Valve Rod	5C-8, 5C-11
Valve-Vacuum Check	5C-9, 5C-11
Power - Delco-Moraine (Section 5A)	
Adjustments	5A-4
Bleeding Brakes	5A-4
Brake Unit	5A-7, 5A-9
Gauging Procedure	5A-13
General Description	5A-1
Master Cylinder	5A-5, 5A-8, 5A-9
Minor Repairs	5A-4
Overhaul	5A-5
System Tests	5A-14
Trouble Diagnosis	5A-15
Standard (Section 5)	
Adjustments	5-6
Bleeding Brakes	5-10
General Description	5-1
Heavy Duty Brakes	5-15
Hydraulic System	5-10
Inspection and Cleaning	5-7
Master Cylinder	5-11
Parking Brake	5-5, 5-14
Service Operations	5-5
Specifications	5-22
Trouble Diagnosis	5-16

Bulb Chart	
Pontiac	12-77
Tempest	12-78
Bumpers - Front and Rear (Section 14)	
Description and Adjustment	14-1
Front Bumpers	14-1
Rear Bumpers	14-2
C	
Caster and Camber Adjustment	3-10
Camshaft	
6 Cyl. Engine	6-8, 6-16
V-8 Engine	6-45, 6-66
Carburetor (See Engine Fuel)	
Chassis Electrical and Instruments. . . (Section 12)	
Battery	6C-3, 6E-1, 12-1
Fuse and Lamp Charts	
Pontiac	12-77
Tempest	12-78
Instruments	12-36
Lighting and Horn Power Circuits	12-19
Windshield Washer Pump	12-69
Windshield Wiper	12-46
Chassis Sheet Metal (Section 11)	
Pontiac	
Fender Extensions and Valance Panel	11-3
Front Fenders	11-4
Grille	11-3, 11-6
Hood	11-1
Hood Hinges	11-2
Hood Latch	11-2
Inner Skirt	11-5
Tempest	
Front Fender	11-10
Grille	11-12
Hood	11-6
Hood Hinges	11-9
Hood Latch	11-7
Hood Pilot Bolt	11-8
Inner Skirt	11-11
Cigar Lighter	12-23
Clock	15-1
Clutch - Manual Transmission (Section 7)	
General Description	7-1
Periodic Service	7-3
Clutch Pedal Adjustment	7-3
Lubrication	7-3
Service and Repairs	7-3
Clutch	7-3
Control Linkage	7-3
Flywheel	7-4
Pilot Bearing	7-4
Starter Ring Gear	7-4
Specifications	7-5
Trouble Diagnosis	7-6
Coil - Ignition	6E-36
Column	
Standard Steering	9-5, 9-7
Tilt Wheel	9-7, 9-10
Companion Flange	4B-7

Compression Ratio	
6 Cyl. Engine	6-7, 6-40
V-8 Engine	6-43, 6-91
Compression Test	6C-1
Compressor - Air Conditioning	1B-13
Condenser - Air Conditioning	1B-19
Connecting Rods	
6 Cyl. Engine	6-31
V-8 Engine	6-74
Control Arms and Bushings	
Front	
Lower	3-16
Upper	3-15
Rear	
Lower	4-4
Upper	4-3
Cooling System - Engine	6A-1
Crankcase Ventilation System	6D-1
Crankshaft	
6 Cyl. Engine	6-37
V-8 Engine	6-80
Crossover Pipe	
Pontiac	8-12
Tempest V-8	8-9
Cruise Control(Section 6F)	
Brake Release Switch	6F-1
Centering Spring	6F-5
Chain Linkage	6F-3
Checking for Damaged Cables and Gears	6F-3
Electrical Checks	6F-6
Major Components	6F-1
Operation	6F-1
Regulator	6F-5
Trouble Diagnosis	6F-9
Vacuum Checks	6F-5
Cylinder Head	
6 Cyl. Engine	6-7, 6-20
V-8 Engine	6-60

D

Decimal Equivalents	0-8
Differential(Section 4B)	
Safe-T-Track	
General Description	4B-24
Major Repairs	4B-27
Service Procedures	4B-26
Specifications	4B-34
Standard	
General Description	4B-1
Major Repairs	4B-10
Minor Service and Repairs	4B-7
Trouble Diagnosis	4B-32
Dimensions - Basic	0-5
Directional Signal	12-23
Discharge Valves	1B-13
Distributor	
6 Cyl. Engine	6E-26
V-8 Engine	6E-31
Distributor Points	6C-4, 6E-28, 6E-33
Drill Sizes	0-7

Drive Belt Tension	6A-15
Drive Shaft	4A-1
Dwell	6C-4

E

Emission Control Systems(Section 6D)	
Air Injection Pump	6D-4
Air Injection Reactor System	6D-3
Controlled Combustion System	6D-4
Positive Crankcase Ventilation System	6D-1
Trouble Diagnosis	6D-13
Engine - Cooling and Lubrication(Section 6A)	
Description	
Cooling	6A-1
Lubrication	6A-6
Drive Belt Chart	6A-15
Service Operations	6A-8
Specifications	6A-16
Trouble Diagnosis	6A-14
Engine - Electrical(Section 6E)	
Battery	6C-3, 6E-1, 6E-20, 12-1
Charging Circuit	6E-9
Generator	6E-9
Diodes	6E-14
Standard Generator Regulator	
Pontiac	6E-16
Tempest	6E-17
Transistor Generator Regulator	
Pontiac	6E-19
Tempest	6E-19
Cranking Circuit	6E-1
Solenoid	6E-3
Starter Motor	6E-4
Trouble Diagnosis	6E-9
Ignition Circuit	6E-25
C.D. Ignition System	6E-41 thru 6E-45
Trouble Diagnosis	6E-47
Distributor	
6 Cyl. Engine	6E-26
V-8 Engine	6E-31
Ignition Coil	6E-36
Ignition Switch	6E-35
Ignition Timing	6E-34
Secondary Ignition Cables	6E-36
Spark Plugs	6E-36
Trouble Diagnosis	6E-38
Trouble Diagnosis	6E-40
Engine - Fuel(Section 6B)	
Accelerator Linkage	6B-4
Air Cleaner and Silencer	6B-1
Carburetor	
Carter AFB	6B-29
Rochester BV	6B-4
Rochester 2GC	6B-16
Rochester 4MV Quadrajets	6B-44
Trouble Diagnosis	6B-58
Fuel Pump	6B-59
Heat Control Valve	6B-1
Idle Speed-Up Device	6B-3
Specifications	6B-60
Throttle Return Check	6B-2
Engine - Lubrication(Section 6A)	

Engine - Mechanical(Section 6)

6 Cyl. Engine	
Belt Adjustment	6-13
Engine	
Camshaft	6-8, 6-16
Cylinder Head	6-7, 6-20
Fitted Block	6-38
Manifolds	6-12
Remove and Install	6-12
Valve Train	6-8, 6-10, 6-17, 6-21
General Description	6-1, 6-7
Harmonic Balancer	6-23
Insulators	6-11
Oil Pan	6-28
Bearings	
Main	6-30
Connecting Rod	6-31
Crankshaft	6-37
Oil Pump	6-25
Piston Rings	6-36
Rod and Piston Assembly	6-31
Service - Periodic	6-11
Specifications	6-40
V-8 Engine	
Belt Adjustments	6-53
Engine	
Camshaft	6-66
Cylinder Heads	6-60
Manifolds	6-54
Remove and Install	6-53
Valve Trains	6-56
General Description	6-1, 6-43
Harmonic Balancer	6-64
Insulators	6-51
Oil Pan	6-68
Bearings	
Main	6-72
Connecting Rod	6-73
Crankshaft	6-80
Fitted Block	6-82
Oil Pump	6-70
Piston Rings	6-79
Rod and Piston Assembly	6-74
Service Information	6-49
Service - Periodic	6-51
Specifications	6-90
Trouble Diagnosis	6-86

Engine - Tune-Up(Section 6C)

Battery	6C-3
Choke	6C-4
Compression	6C-1
Connections - Tune-Up	6C-4
Coolant Level and Hoses	6C-4
Crankcase	
Oil Level	6C-4
Ventilation	6C-5
Idle Speed and Mixture	6C-5
Ignition System	6C-2
Fan Belt	6C-3
Fuel Lines and Filter	6C-4
Generator and Regulator	6C-3
Intake Manifold Bolts	6C-3
Manifold Heat Valve	6C-3
Point Dwell	6C-4

Engine - Tune-Up (Continued)

Road Test	6C-6
Spark Plugs	6C-1
Timing and Advance	6C-5
Evaporator	1B-9
Exhaust System(Section 8)	
Pontiac	
Description	8-12
Dual Exhaust System	8-14
Resonator	8-14
Single Exhaust System	8-12
Tempest	
Description	
6 Cyl. Engine	8-7
V-8 Engine	8-7
Service Procedures	
6 Cyl. Engine	8-8
V-8 Engine	8-9
Expansion Valve	B-7

F

Fan	6A-3
Fan Belt	6C-3
Fender - Front(See Chassis Sheet Metal)	
Flywheel	7-4
Frame(Section 2)	
Body to Frame Mountings	2-2
General Description	2-1
Location for Raising	2-2
Fuel	
Filter	0-11
Gauge	12-34
Lines	8-4
Pump	6B-59
Tank(Section 8)	
Description	8-1
Service and Repairs	8-4
Trouble Diagnosis	8-7
Fuse Block	12-19
Fuse Chart	
Pontiac	12-77
Tempest	12-78

G

Gear	
Differential Pinion	4B-17
Power Steering	9A-1
Standard Steering	9-1
Starter Ring	7-4
Generator	6E-9
Generator - Indicator	12-36
Grille(See Chassis Sheet Metal)	

H

Harmonic Balancer	
6 Cyl. Engine	6-23
V-8 Engine	6-64

Headlights	12-19
Heater	1-1
Heating	
General Description	1-1
Operation	1-1
Service	1-6
Specifications	1-19
Trouble Diagnosis	1-17
Upper Level Ventilation	1-3
Vent Ducts	1-3
Hood. (See Chassis Sheet Metal)	
Horns	12-22
Housing Assembly	
6 Cyl. Engine Accessory	6-25
Hydraulic Valve Lash Adjuster	6-17
Hydraulic Valve Lifter	6-56

I

Ignition Circuit	6E-25
Switch	6E-34
Timing	6C-5, 6E-35
Information - General (Section 0)	
Basic Dimensions	0-5
Body Identification Plate	0-1
Car Model Identification	0-1
Decimal Equivalents	0-8
Drill Sizes	0-7
Engine Serial Number	0-1
Lifting	0-3
Lock Information	0-4
Lubrication	0-9
Oil Recommendations	0-9
Pulley Ratios	0-7
Rocker Panel Heights	0-6
Series Identification	0-2
Towing	0-3
Transmission Serial Numbers	0-2
Units of Measure	0-8
Vehicle Identification Plate	0-1
Instruments	12-36
Insulators	
6 Cyl. Engine	6-11
V-8 Engine	6-51

K

Key	
Blanks	0-4
Coding	0-4

L

Lamp and Bulb Chart	
Pontiac	12-77
Tempest	12-78
Lifting and Towing	2-2
Lighting	12-19
Linkage	
Carburetion	6B-4
Steering	9-22
Lock Coding	0-4
Lubrication	0-9

M

Maintenance Items and Intervals	0-9
Manifold (Section 6)	
Exhaust - V-8 Engine	6-54
Exhaust and Intake - 6 Cyl. Engine	6-10, 6-12
Heat Control Valve	6B-1
Intake - V-8 Engine	6-54
Master Cylinder - Brake (See Brakes)	
Model Identification	0-1
Muffler (Section 8)	
Pontiac	8-14
Tempest	
6 Cyl. Engine	8-8, 8-9
V-8 Engine.	8-10, 8-12

N

N/V Ratio	0-7
Noise	
A.I.R. System	6D-13
Axle	4B-33
Clutch	7-6
Drive Line	4A-6
Front Suspension	3-1, 3-20
Rear Suspension	4-2, 4-7
Transmission	7A-14, 7B-13, 7C-18, 7E-92

O

Oil Filter	0-9, 6A-7
Oil Pan	
Pontiac	6-68
Tempest	6-28
Oil Pressure Indicator	12-40
Oil Pump - Engine	
Pontiac	6-70, 6A-6
Tempest	6-25, 6A-6
Oil Recommendations	0-9

P

Parking Brake	5-5, 5-14
Pilot Bearing	7-4
Pinion Bearing	4B-8
Piston	
6 Cyl. Engine	6-32
V-8 Engine	6-74
P.O.A. Valve	1B-12
Positive Crankcase	
Ventilation (See Emission Control Systems)	
Power Brakes (See Brakes)	
Power Steering (See Steering)	
Programmer	1C-1
Propeller Shaft	4A-1
Push Rod	6-56
Push Rod Cover or Gasket	6-55

R

Radiator	6A-13, 6A-14, 13-1
Radiator Support and Mounting Parts	13-2, 13-3
Radio	15-3
Rear Axle	(See Differential)
Rear Seat Speaker	15-8
Rear Window Defogger	15-23
Receiver-Dehydrator Assembly	1B-19
Red Lead Test	4B-12
Regulator - Generator	6C-3, 6E-16
Road Test	6C-6
Rocker Panel Heights	0-6

S

Sensor	1C-1
Serial Numbers	(Section 0)
Body	0-2
Engine	0-1
Transmission	0-2
Vehicle	0-1
Service Intervals and Items	0-9
Shock Absorbers	
Front	3-2, 3-13
Rear	4-1
Solenoid	6E-3
Spark Plugs	6C-1
Speaker	
Rear Seat	15-8
Verbra-Phonic	15-20
Speedometer	12-40
Speedometer Gear Usage . (Refer To Parts Catalog)	
Springs	
Front	3-13
Rear	4-3
Stabilizer Shaft	3-15
Starter Ring Gear	7-4
Starting Motor	6E-4
Steering	
Column	
Standard Energy Absorbing	9-5, 9-7, 9-15
Tilt Wheel	9-7, 9-10
Linkage	9-22
Power	(Section 9A)
Gear	9A-1 thru 9A-19
Specifications	9A-19
Trouble Diagnosis	9-26
Pump	9A-20 thru 9A-30
Specifications	9A-31
Trouble Diagnosis	9-26
Standard	(Section 9)
Gear	9-1 thru 9-26
Specifications	9-32
Trouble Diagnosis	9-26
Steering Axis Inclination	3-12
Steering Knuckle	3-15
Stop Lamp Switch	5-6, 5A-5, 5B-5, 5C-7
Suction Valves	1B-13
Superlift	4-5

Suspension

Front	(Section 3)
Adjustment and Checks	3-6
Alignment	3-8
Balance - Wheels and Tires	3-7
Ball Joints	3-7, 3-18
General Description	3-1
Minor Repairs	3-12
Periodic Service	3-5
Shock Absorbers	3-2, 3-13
Specifications	3-23, 3-24
Trouble Diagnosis	3-20
Rear	(Section 4)
Automatic Level Control	
Description and Operation	4-9
Service Procedures	4-13
Trouble Diagnosis	4-17, 4-21
Suspension	
Adjustments and Checks	4-2
General Description	4-1
Minor Repairs	4-2
Periodic Service	4-2
Shock Absorbers	4-1
Specifications	4-22
Superlift	
General Description	4-5
Trouble Diagnosis	4-7

T

Tachometer	15-24
Tail Light	12-21
Tail Pipe	8-9, 8-11, 8-12, 8-14
Temperature Indicator	12-38
Thermostat	6A-4, 6A-10
Throttle Return Check	6B-2
Tilt Steering Wheel	9-7, 9-10
Timing	6C-5
Belt - 6 Cyl. Engine	6-13, 6-24
Chain and Cover - V-8 Engine	6-64
Tire Balance	3-7, 10-4
Tires	10-1
Toe-In Adjustment	3-11
Transistor Regulator	6E-19
Transmission	
Four-Speed Manual - Muncie	(Section 7C)
Adjustments	7C-4
Assemble	7C-12
Cleaning and Inspection	7C-12
Description and Design	7C-1
Install	7C-16
Minor Repairs	7C-4
Operation	7C-2
Periodic Service	7C-4
Remove and Disassemble	7C-7, 7C-9
Specifications	7C-20
Trouble Diagnosis	7C-18
Four-Speed Manual - Saginaw (Sprint) (Section 7D)	
Adjustments	7D-2
General Description	7D-1
Identification	7D-3
Major Repairs	7D-2
Minor Repairs	7D-3

Transmission (Continued)	
Tempest Automatic	(Section 7F)
Adjustments	7F-18
Assemble	7F-44
General Description	7F-1
Hydraulic Operation	7F-5
Identification	7F-1
Install	7F-28
Minor Repairs	7F-18
Power Flow	7F-4
Pressure Checks	7F-53
Remove and Disassemble	7F-28
Specifications	7F-55
Trouble Diagnosis	7F-49
Three-Speed Manual - Dearborn	(Section 7A)
Adjustments	7A-1
Assemble	7A-8
Description	7A-1
Install	7A-13
Minor Repairs	7A-2
Remove and Disassemble	7A-3
Specifications	7A-13
Trouble Diagnosis	7A-14
Three-Speed Manual - Saginaw	(Section 7B)
Adjustments	7B-1
Assemble	7B-8
Cleaning and Inspection	7B-6
Description	7B-1
Install	7B-10
Minor Repairs	7B-2
Periodic Service	7B-1
Remove and Disassemble	7B-3
Specifications	7B-14
Trouble Diagnosis	7B-13
Turbo Hydra-Matic	(Section 7E)
Adjustments	7E-32
Assemble	7E-72
General Description	7E-4
Hydraulic Operations	7E-6
Identification	7E-6
Install	7E-84
Minor Repairs	7E-32
Periodic Service	7E-32
Planetary Gear Train	7E-1
Power Flow	7E-15
Pressure Checks	7E-86

Transmission	
Turbo Hydra-Matic (Continued)	
Remove and Disassemble	7E-38
Servo Operations	7E-9
Specifications	7E-86, 7E-92
Sprag and Roller Clutches	7E-3
Trouble Diagnosis	7E-84
Tune-Up	(See Engine - Tune-Up)

U

Units of Measure	0-8
Universal Joints	4A-3

V

Valance Panel	(See Chassis Sheet Metal)
Valve Train	
6 Cyl. Engine	6-8
V-8 Engine	6-47
Verbra-Phonic Speaker	15-20
Vehicle Identification Plate	0-1

W

Water Control Valve	1B-6
Water Pump	
6 Cyl. Engine	6A-3, 6A-13
V-8 Engine	6A-3, 6A-12
Weights and Measures	0-8
Wheel Bearings	3-6, 3-12
Wheel Cylinders - Brake	5-13
Wheel - Steering	9-5
Wheels and Tires	(Section 10)
Balancing	10-4
General Description	10-1
Periodic Service	
Inflation	10-2
Rotation	10-2
Specifications	10-9
Trouble Diagnosis	10-6
Windshield Washer Pump	12-69
Windshield Wiper Assembly	12-46
Wiring Diagrams	12-1 thru 12-15
Wiring Harness	12-19