

WHEELS AND TIRES

The information in this section applies only to tire and wheel specifications and service procedures which differ from that contained in the 1967 Pontiac Service Manual. Unless otherwise noted, Tempest specifications will also apply to the Firebird.

The Firebird uses a six inch wide rim as standard. The Space Saver Tire uses the five inch wide rim. Diameter of all wheels is fourteen inches. While Firebird wheels have a 4.75" bolt circle, which is the same as used on all Tempest models, the wheel offset of .60" does not permit using the Tempest wheel due to its offset of 1.00". However wheels used with the disc brake option are the same as the Tempest models (1.00" offset) with disc brakes.

The 7.35 x 14 Space Saver Spare Tire is the standard equipment spare tire. A spare tire which matches the four road tires (standard or optional) is available. The Space Saver Spare Tire is a 2 ply 4 ply rated tire that is designed for space tire use only and will automatically return to its collapsed position upon deflation.

MODELS	STANDARD	OPTIONAL
All*	E70 X 14	E70 X 14 Red Line E70 X 14 White Line 185R X 14 Radial Ply White Line

*E70 X 14 Red Line is standard with 400 cu.in. engine.

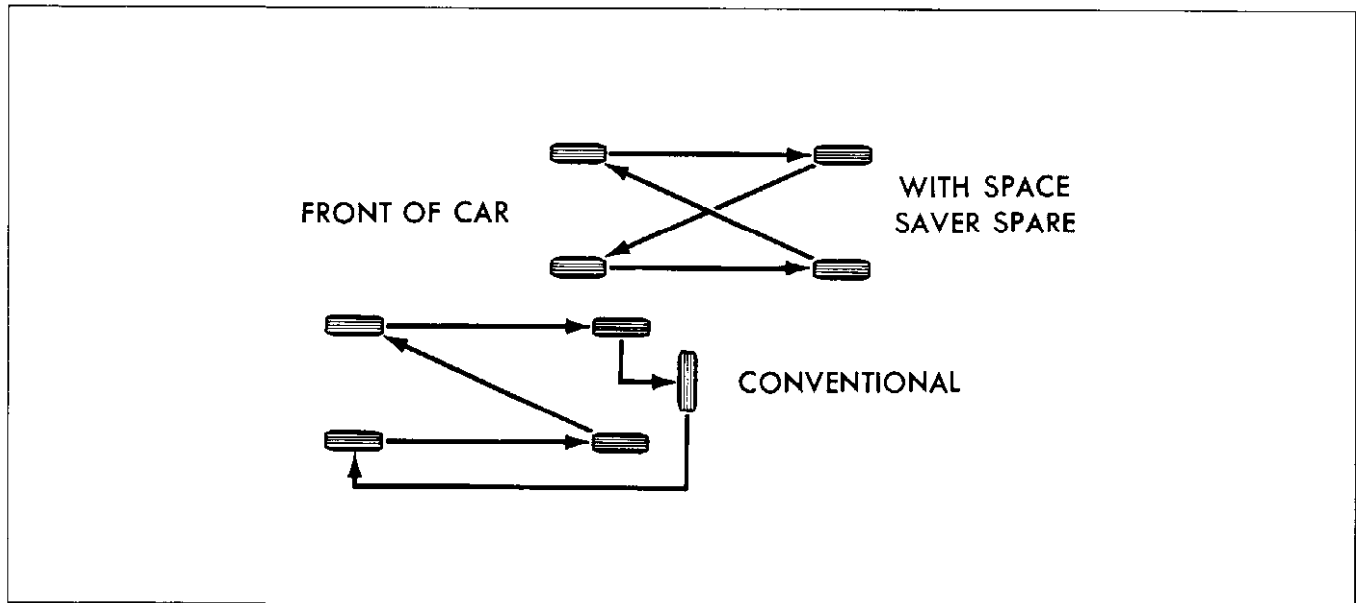


Fig. 10-1 Tire Rotation